

125° hinge



Web code – click on the code or enter it in the Product Configurator



DQDJIM

Planning

Hinge dimensions and gap calculation based on factory setting (mounting plate spacing = 0 mm)



Hinge and front protrusion at 90° opening angle

Overlay application
0-protrusion

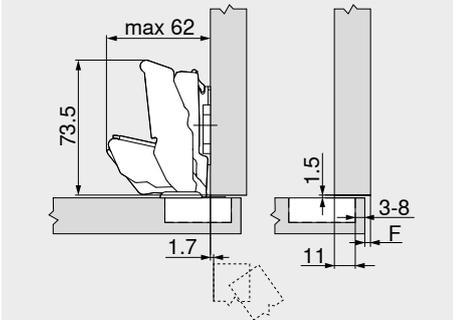
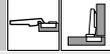


F Gap

Dual application

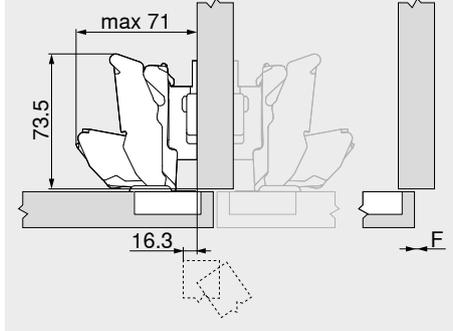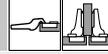

Inset application

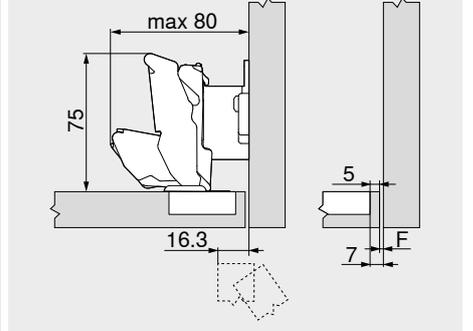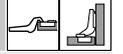

A Move back fixing position of mounting plate by front thickness FD + 1.5 mm

Drilling distance TB

MD	Front overlay FA (mm)																		
	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19				
0											3	4	5	6	7	8			
3							3	4	5	6	7	8							
6				3	4	5	6	7	8										
9	3	4	5	6	7	8													

MD Mounting plate spacing (mm)

MD	Front overlay FA (mm)																				
	-4.5	-3.5	-2.5	-1.5	-0.5	0.5	1.5	2.5	3.5	4.5	5.5	6.5	7.5	8.5	9.5						
0																3	4	5	6	7	8
3																3	4	5	6	7	8
6																3	4	5	6	7	8
9																3	4	5	6	7	8

MD Mounting plate spacing (mm)

MD	Front overlay FA (mm)				
	-4.5	-3.5	-2.5	-1.5	-0.5
0					
3					
6					
9	3	4	5	6	7


MD Mounting plate spacing (mm)

Minimum gap F for fronts with a front radius (R = 1 mm) based on the factory setting


Drilling distance TB (mm)	Front thickness FD (mm)										
	29	30	31	32	33	34	35	36	37	38	39
3	0	0	0	0.1	0.3	0.7	1.2	2.0	2.8	4.1	5.7
4	0	0	0	0.1	0.4	0.8	1.5	2.3	3.4	4.9	
5	0	0	0	0.1	0.4	1.0	1.7	2.8	4.2		
6	0	0	0	0.1	0.6	1.2	2.1	3.5			
7	0	0	0	0.2	0.7	1.6	2.8				
8	0	0	0	0.3	1.0	2.0					

We recommend a trial application for an overlay application against a wall
92° Opening angle stop


Adjustment

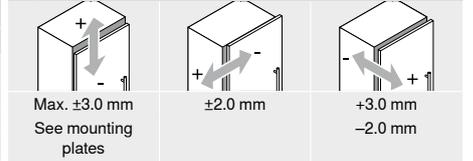


Screw-on

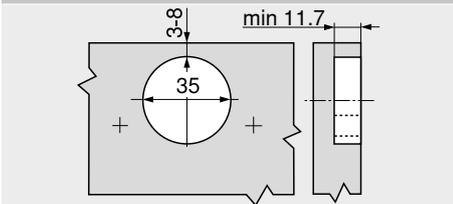

Knock-in

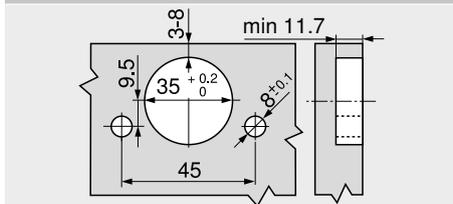

Hinge boss dimensions

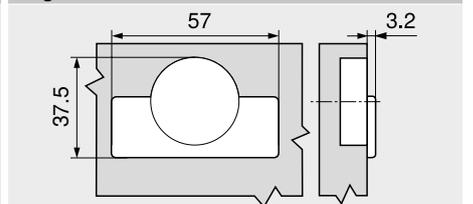

Reference pages

Overview	73
Mounting plates	150
Accessories – hinge arm cover cap	157
Accessories	159
TIP-ON for doors	190
Blum services	602
More technical details	708

Assembly, removal and adjustment

Short URL
www.blum.com/a210

