



## Cooker Switch – Double Plate – Brushed Nickel

**Variant code: 34211**

Our collection of switches complements our many ironmongery finishes.

Used to control power to a cooker and includes a neon light to show when the switch is on.

Available as a single or double plate.

Supplied with matching SS wood screws.

Property	Value
Finish	Black Nickel
Range	Cooker