

High fronted pull-out – gallery – D




Web code – click on the code or enter it in the Product Configurator


DQC9RY

Planning

Space requirement in cabinet

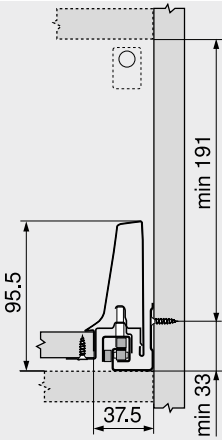


Installation dimensions – front – screw-on

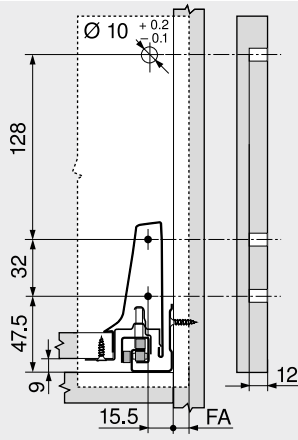


FA Front overlay



Drilling distances – front – INSERTA | knock-in

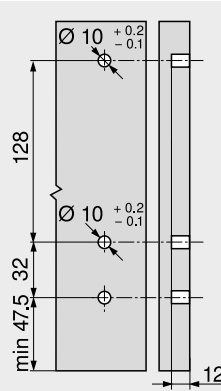


Installation dimensions – back

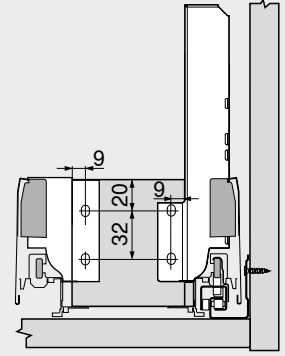

Cutting – 16 mm chipboard

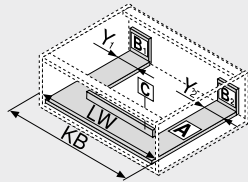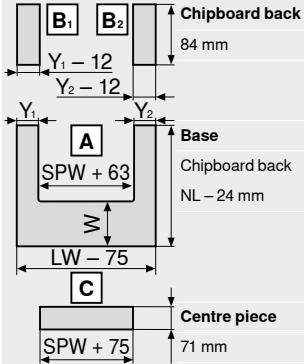

Drilling distances – centre piece

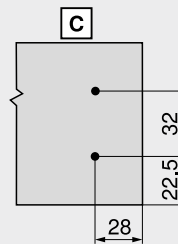

LW Internal cabinet width
 NL Nominal length
 SPW Internal cabinet width between the inner drawer sides
 W = NL drawer sides exterior – NL drawer sides interior – 10 mm

LW Internal cabinet width
 KB Cabinet width

	Y min. (mm)	Y max. (mm)
BLUMOTION	48	225
TIP-ON BLUMOTION	48	225

Reference pages

Overview	291	Accessories
SERVO-DRIVE for LEGRABOX MERIVOBOX TANDEMBOX	362	Cabinet profile fixing positions
		Blum services
		More technical details
TIP-ON BLUMOTION for LEGRABOX MERIVOBOX TANDEMBOX	394	
ORGA-LINE for TANDEMBOX	554	
CABLOXX	594	

328 Assembly, removal and adjustment

334

602

708

Short URL

www.blum.com/a350

