

TANDEM full extension with BLUMOTION – 560H




Web code – click on the code or enter it in the Product Configurator

DQD1XA


Planning

Space requirement in cabinet

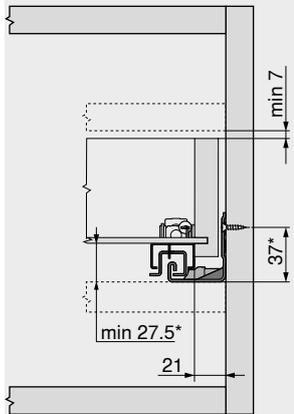


* +3 mm with side stabilisation

Drawer | inner drawer

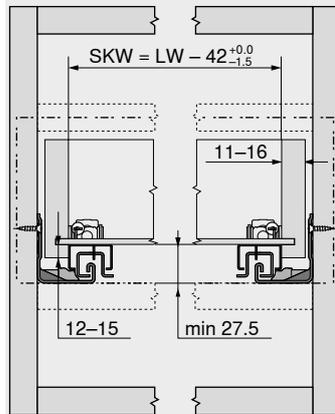


SKW Internal drawer width
LW Internal cabinet width

Drawer

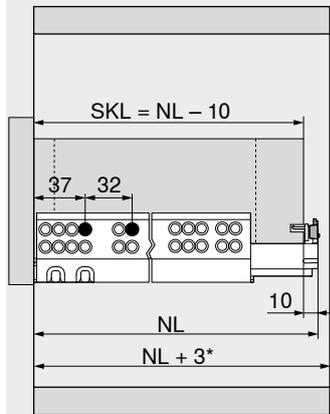


SKL Drawer length
NL Nominal length
* Additional +12 mm with side stabilisation

Inner drawer

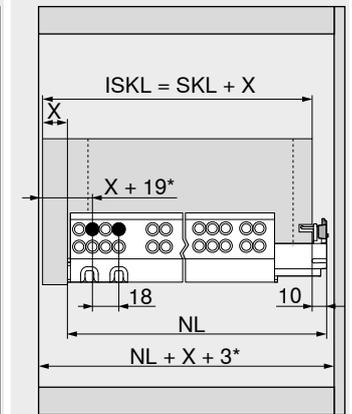


ISKL Inner drawer length
SKL Drawer length
NL Nominal length
X Front thickness
* Additional +2 mm with POSISTOP

Drawer assembly

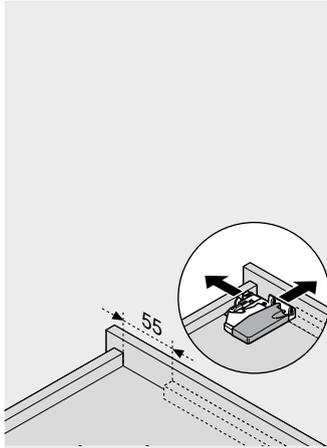

Use drilling template T65.1000.02

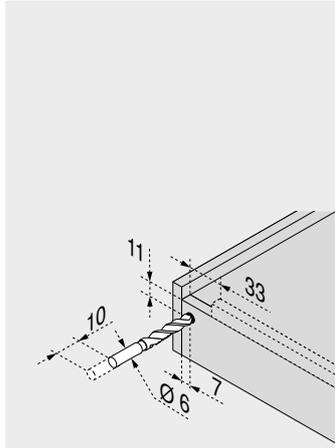

Use drilling template T65.1000.02

Reference pages

Overview	431	Assembly, removal and adjustment
SERVO-DRIVE for MOVENTO TANDEM	462	
TIP-ON for MOVENTO TANDEM	506	Short URL www.blum.com/a420
CABLOXX	594	
Accessories	452	
Attachment of runners	460	
Blum services	602	
More technical details	708	

