

TANDEM single extension with BLUMOTION – 550H




Web code – click on the code or enter it in the Product Configurator

DQD3BY


Planning

Space requirement in cabinet

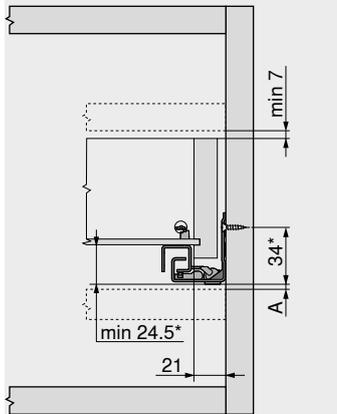


A 3 mm distance to interchange with full extension  
 \* +3 mm with side stabilisation

Drawer | inner drawer

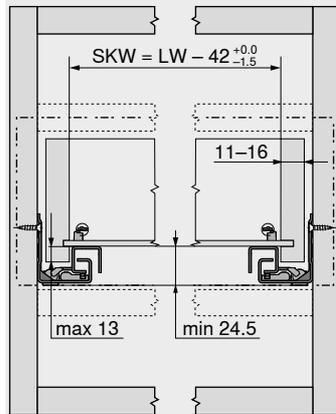


SKW Internal drawer width  
 LW Internal cabinet width

Drawer

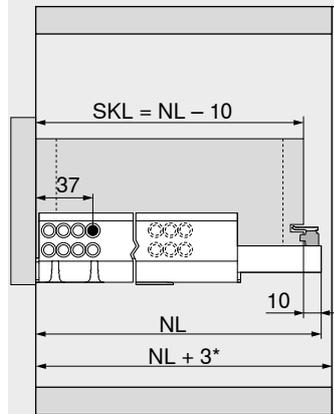


SKL Drawer length  
 NL Nominal length  
 \* Additional +12 mm with side stabilisation

Inner drawer

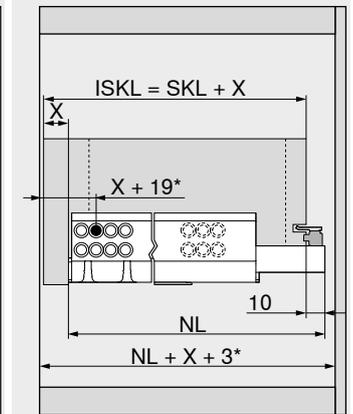


ISKL Inner drawer length  
 SKL Drawer length  
 NL Nominal length  
 X Front thickness  
 \* Additional +2 mm with POSISTOP

Drawer assembly

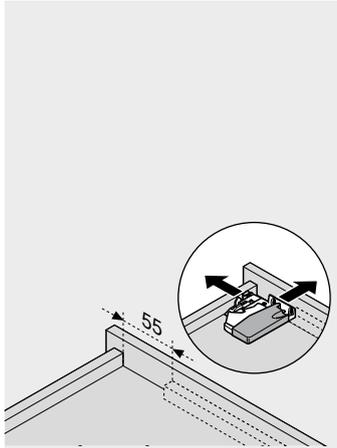

Use drilling template T65.1000.02

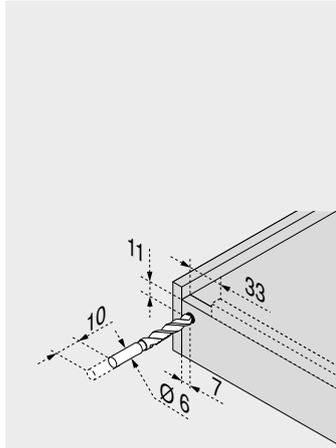

Use drilling template T65.1000.02

Reference pages

Overview	431	Assembly, removal and adjustment
SERVO-DRIVE for MOVENTO   TANDEM	462	
TIP-ON for MOVENTO   TANDEM	506	Short URL <a href="http://www.blum.com/a420">www.blum.com/a420</a>
CABLOXX	594	
Accessories	452	
Attachment of runners	460	
Blum services	602	
More technical details	708	

