



TANDEM full extension with BLUMOTION – 560F




Web code – click on the code or enter it in the Product Configurator


DQHL6M

Planning

Space requirement in cabinet

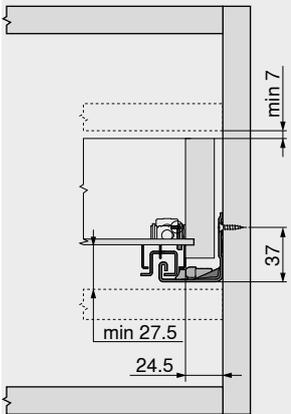


Drawer | inner drawer

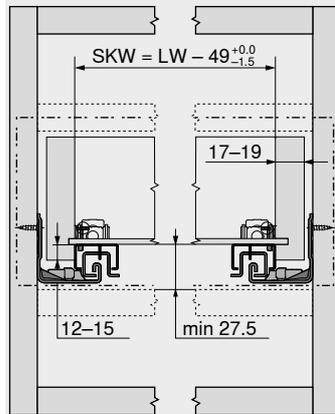


SKW Internal drawer width  
LW Internal cabinet width

Drawer

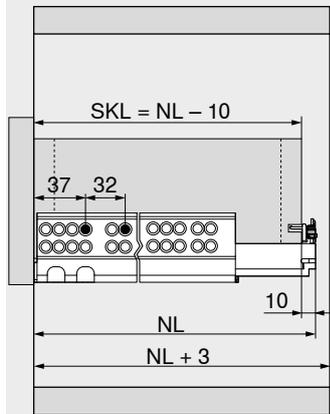


SKL Drawer length  
NL Nominal length

Inner drawer

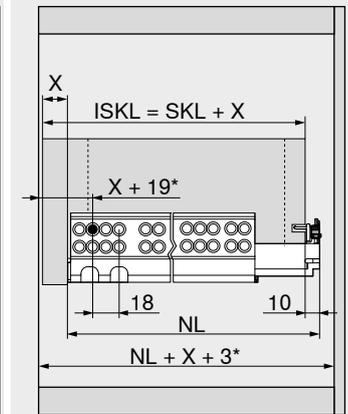


ISKL Inner drawer length  
SKL Drawer length  
NL Nominal length  
X Front thickness  
\* Additional +2 mm with POSISTOP

Drawer assembly

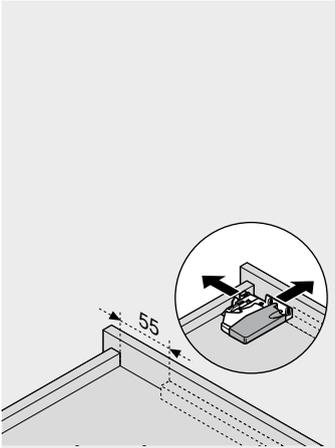

Use drilling template T65.1000.02

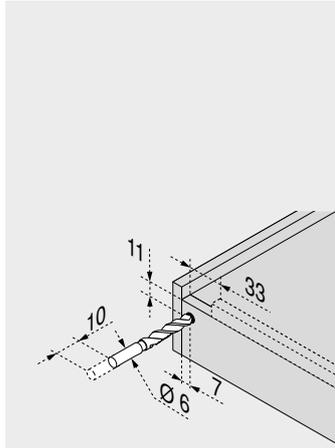

Use drilling template T65.1000.02

Reference pages

Overview	431	TANDEM 19 mm
SERVO-DRIVE for MOVENTO   TANDEM	462	
TIP-ON for MOVENTO   TANDEM	506	Short URL <a href="http://www.blum.com/i011">www.blum.com/i011</a>
CABLOXX	594	Assembly, removal and adjustment
Accessories	452	
Attachment of runners	461	
Blum services	602	Short URL
More technical details	708	<a href="http://www.blum.com/a420">www.blum.com/a420</a>

