


Simple Installation and Detachment by One-Touch

[How to Install]


Align the hinge body shaft with the edge of the mounting plate and fit it in, pushing the hinge body bottom edge down until it clicks.

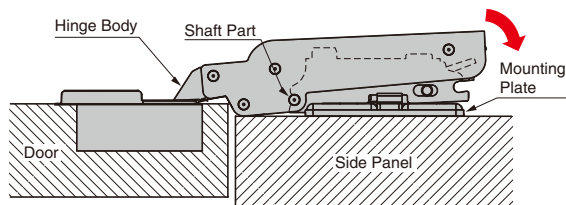


Check that the hinge body is correctly installed on the mounting plate.

[How to Remove]

Push the lock lever up in the  direction and remove the hinge body from the mounting plate.

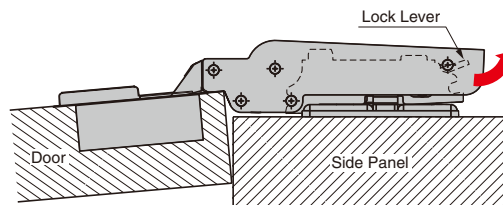

Easy and Fast Adjustment

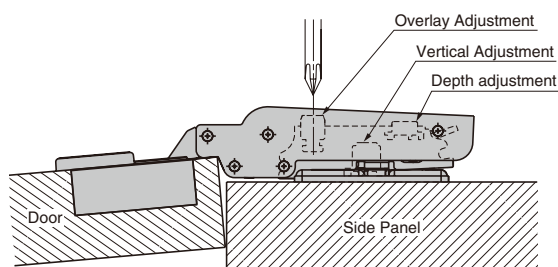





*The adjustment method above involves a No.2 Phillips screwdriver.

The eccentric cam mechanism enables door adjustment in each direction simply by turning the depth and vertical adjustment screws. Door position adjustment is easier because the process of loosening the adjustment screws, deciding on a position, and fixing the door is not required. Overlay and tilt can be adjusted with the overlay adjustment screw.


[Caution]

- Be sure to use a manual screwdriver for each adjustment screw, making fine adjustments within the screw adjustment range. Do not use an air/electric/chargeable screwdriver to rotate screws beyond the adjustment range limits, as this will damage the adjustment mechanism and lead to dysfunction.

[Adjustment Direction/Amount/Method]

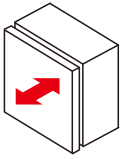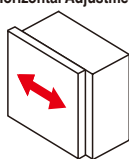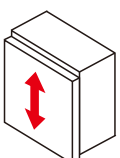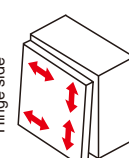Depth Adjustment 	+1.5 mm, -2.5 mm Rotate the depth adjustment screw to the left  to bring the door forward and to the right  to move it back.	Overlay Adjustment (Horizontal Adjustment) 	+0 mm, -4 mm Rotate the overlay adjustment screw to the right  for smaller overlay and to the left  for larger.
Vertical Adjustment 	±3 mm For right-hanging types, rotate the vertical adjustment screw to the left  to bring the door up and to the right  to move it down. *For left-hanging types, the door moves in the opposite direction.	Tilt Adjustment 	— Rotate the overlay adjustment screw to the left and right to adjust.

Slim shape

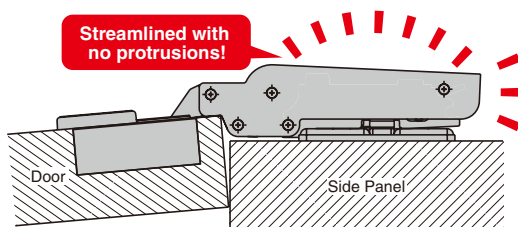

Slim design with no adjustment screw protrusions on the body top. The lock lever does not protrude from the body bottom, ensuring safety.

[Caution]

- Different sizes of the Heavy-Duty Concealed Hinge J95 are required for glass doors and wooden doors.
- Prioritize the door weight when determining the glass size.
- Mount the hinges as far apart as possible. When using 3 pieces, keep the mounting pitch uniform. Also, take into account door warping.
- Because the door dimensions and number of hinges mounted are guidelines, confirm through actual mounting.
- Apply lubricant periodically as maintenance when in use.
- When opening and closing the hinges before mounting the door, be careful not to snag fingers, as the hinge has a powerful catch.
- Do not repeatedly open and close the concealed hinge as an individual product before mounting. Damage may result.
- When using glass, use tempered glass. It is also recommended to use shatter-proof film on the glass. Be sure to remove the shatter-proof film in the areas where the product contacts the glass.